Nintendo

IM-DOT-TDV-EUR

TDEV User's Manual

WARNING

■ WARNING! - Laser Device

This device is a Class I laser product. Do not attempt to disassemble the TDEV. Refer servicing to qualified personnel only.

Caution - Use of controls or adjustments or procedures other than those specified herein may result in hazardous radiation exposure.

Laser Specification


Laser Type: Semiconductor Laser
Laser Wavelength: 668nm(typ.) (658nm~678nm)
Laser Output: MAX. 0.8mW
Numeric Aperture: 0.6

■ NOTE:

Only NR-Discs can be used with the TDEV. Mass produced Nintendo GameCube™ Game Discs will not operate.

How to Operate

Various Functions of TDEV

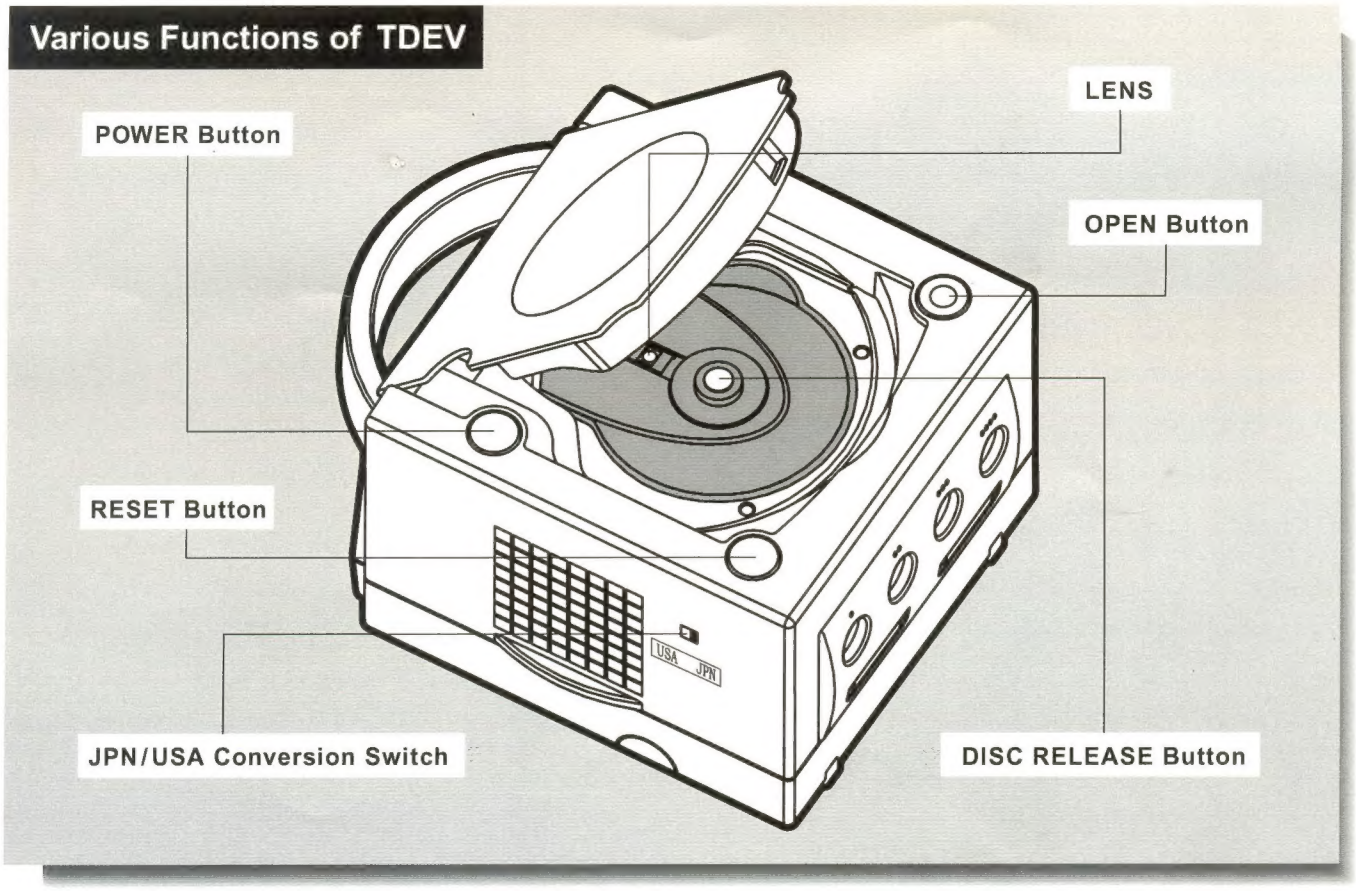

■ POWER Button / RESET Button / OPEN Button

The POWER Button is on top of the TDEV, in the upper left. The RESET Button is on top of the TDEV, in the lower left. The OPEN Button is on top of the TDEV, in the lower right.

■ DISC RELEASE Button

Press this button to release the NR-Disc. Press when the NR-Disc is not spinning.

【Note】 When the power to the TDEV is ON and you open the Disc Cover, the NR-Disc will stop spinning.

■ JPN / USA (Destination) Conversion Switch

By changing this switch on the side of the TDEV, you can change to the initial program loader (IPL) for the particular destination. Use this switch when the power is OFF.

■ Starting a Game

1. Turn the power to the TV to ON.
2. Change the TV's input switch to the video input screen to which the TDEV is connected.
3. Check to make sure that the Nintendo Gamecube™ Controller(s) are inserted correctly into the TDEV, and that the AC Adapter is correctly inserted into the outlet.
4. Press the OPEN Button to open the Disc Cover.
5. Insert the NR-Disc so it is set properly and the printed side is facing up.

   【Note】 The side of the NR-Disc not read by the laser is printed white. This allows you to use a felt pen to write the TITLE, DATE, etc. on the NR-Disc. Do not attach any labels to the NR-Disc.
6. Press the POWER Button to turn TDEV ON. The first time you turn the power ON a screen is displayed for you to enter the date / time. Then it goes to the Main Menu.

■ Ending a Game

With the power ON, press the OPEN Button to open the Disc Cover. This will stop the NR-Disc from spinning.

TDEV conforms to:

- EMC Directive / Directive CEM (89/336/EEC)
- Low Voltage Directive for Power Supply/
  Directive Basse tension pour bloc d'alimentation (73/23/EEC)

CE

D-63760 Großostheim

PLEASE RETAIN THE PACKAGING.