PHILIPS VIDEOPAC 30



Battlefield
Schlachtfeld
Champ de bataille
Slagveld
I due generali
Guerillakrig
Fånga Generalen
Campo de batalla
A batalha

PHILIPS

Instructions for Use

ENGLISH

Battlefield

First read these instructions before you start to play
(2 players) Press RESET
Next press key 1

Your screen shows a small forest and two armies, each with a general. In the left-hand top corner you'll see the blue general and his four soldiers (left handset), in the right-hand bottom corner a yellow general with his four soldiers (right handset).

The purpose of the game is to capture the enemy general. If you succeed in capturing him ten times, you have won the war.


How the game is played
You cannot control your soldiers directly. They will automatically try and find their way to the other general. When they encounter enemy soldiers, they may shoot them.... or get shot by an enemy bullet. When hit by a bullet, they are stunned and will not move any more. The generals are invulnerable to enemy bullets.

You can move your general however with the joystick of your handset. This way you may try and escape from pursuing enemy soldiers. Your general can also re-animate your soldiers that have been shot. When he touches them, they will revive.
As a true general he may also lead his men to the enemy camp. Use the joystick to control his movements. When you press the action button, he will beckon his soldiers to follow him. They will, provided their way isn't blocked by trees or soldiers. Once they have a clear path to the opposing general, you can let them go and they will pursue him automatically.

When one of the generals is captured, both officers first act in a very gentlemanly fashion but not for long. There's not much time to rejoice because the game continues immediately and winning a battle doesn't mean you have won the war! It takes ten victories to win one war with this Videopac game.

Starting a new series
Immediately after one war has been fought and the winner is known, a next one will start so you continue to play.

Check procedure
If you suspect a fault in the equipment follow this procedure (with a Videopac installed).
Press RESET (△). The TV will emit a short sound, and 'SELECT GAME' should appear on your TV screen.
If not, ensure that the equipment is set up properly as detailed in the Instructions for Use (both of the equipment, and of the Videopac used). If the fault remains, take both the equipment and Videopac to your dealer.

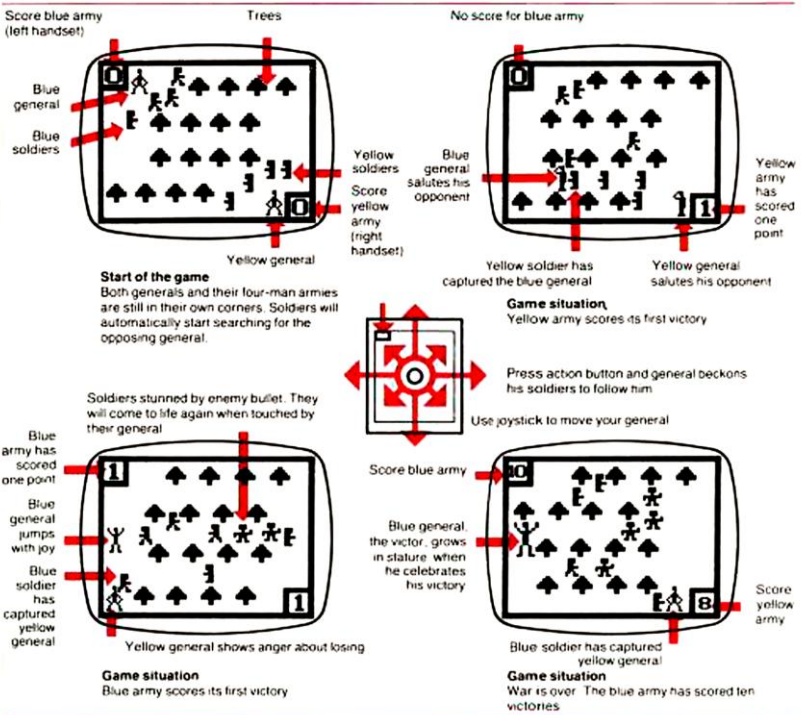

Each time a game is finished, press RESET (⌂), 'SELECT GAME' is shown on the screen. Now:

(a) Select another game.

Or (b) Select another Videopac.
Remove existing Videopac by placing one hand next to it, and pulling handle upwards.
Replace Videopac in its box.
Refer now to Instructions for Use of the next Videopac.

Or (c) Plug aerial back into TV, and unplug the Videopac Computer from the mains.



A copyright protection is claimed
on the program stored within the cartridge.

© 1981 N.V. Philips' Gloeilampenfabrieken

3111 106 62790

SIP